



Many fault indicators for single-phase underground applications are also applicable in three-phase underground applications.

Please call for more information.

Use magnetic cable guides (page 25) to keep remote display and sensor wiring neatly trained within an enclosure.

LINAM[®] Fault Indicator Selection Guide

